


SUPER - CHICK
30 in. OUTDOOR HAIRD LAUNCHED GLIDER
 by JIM WALTERS

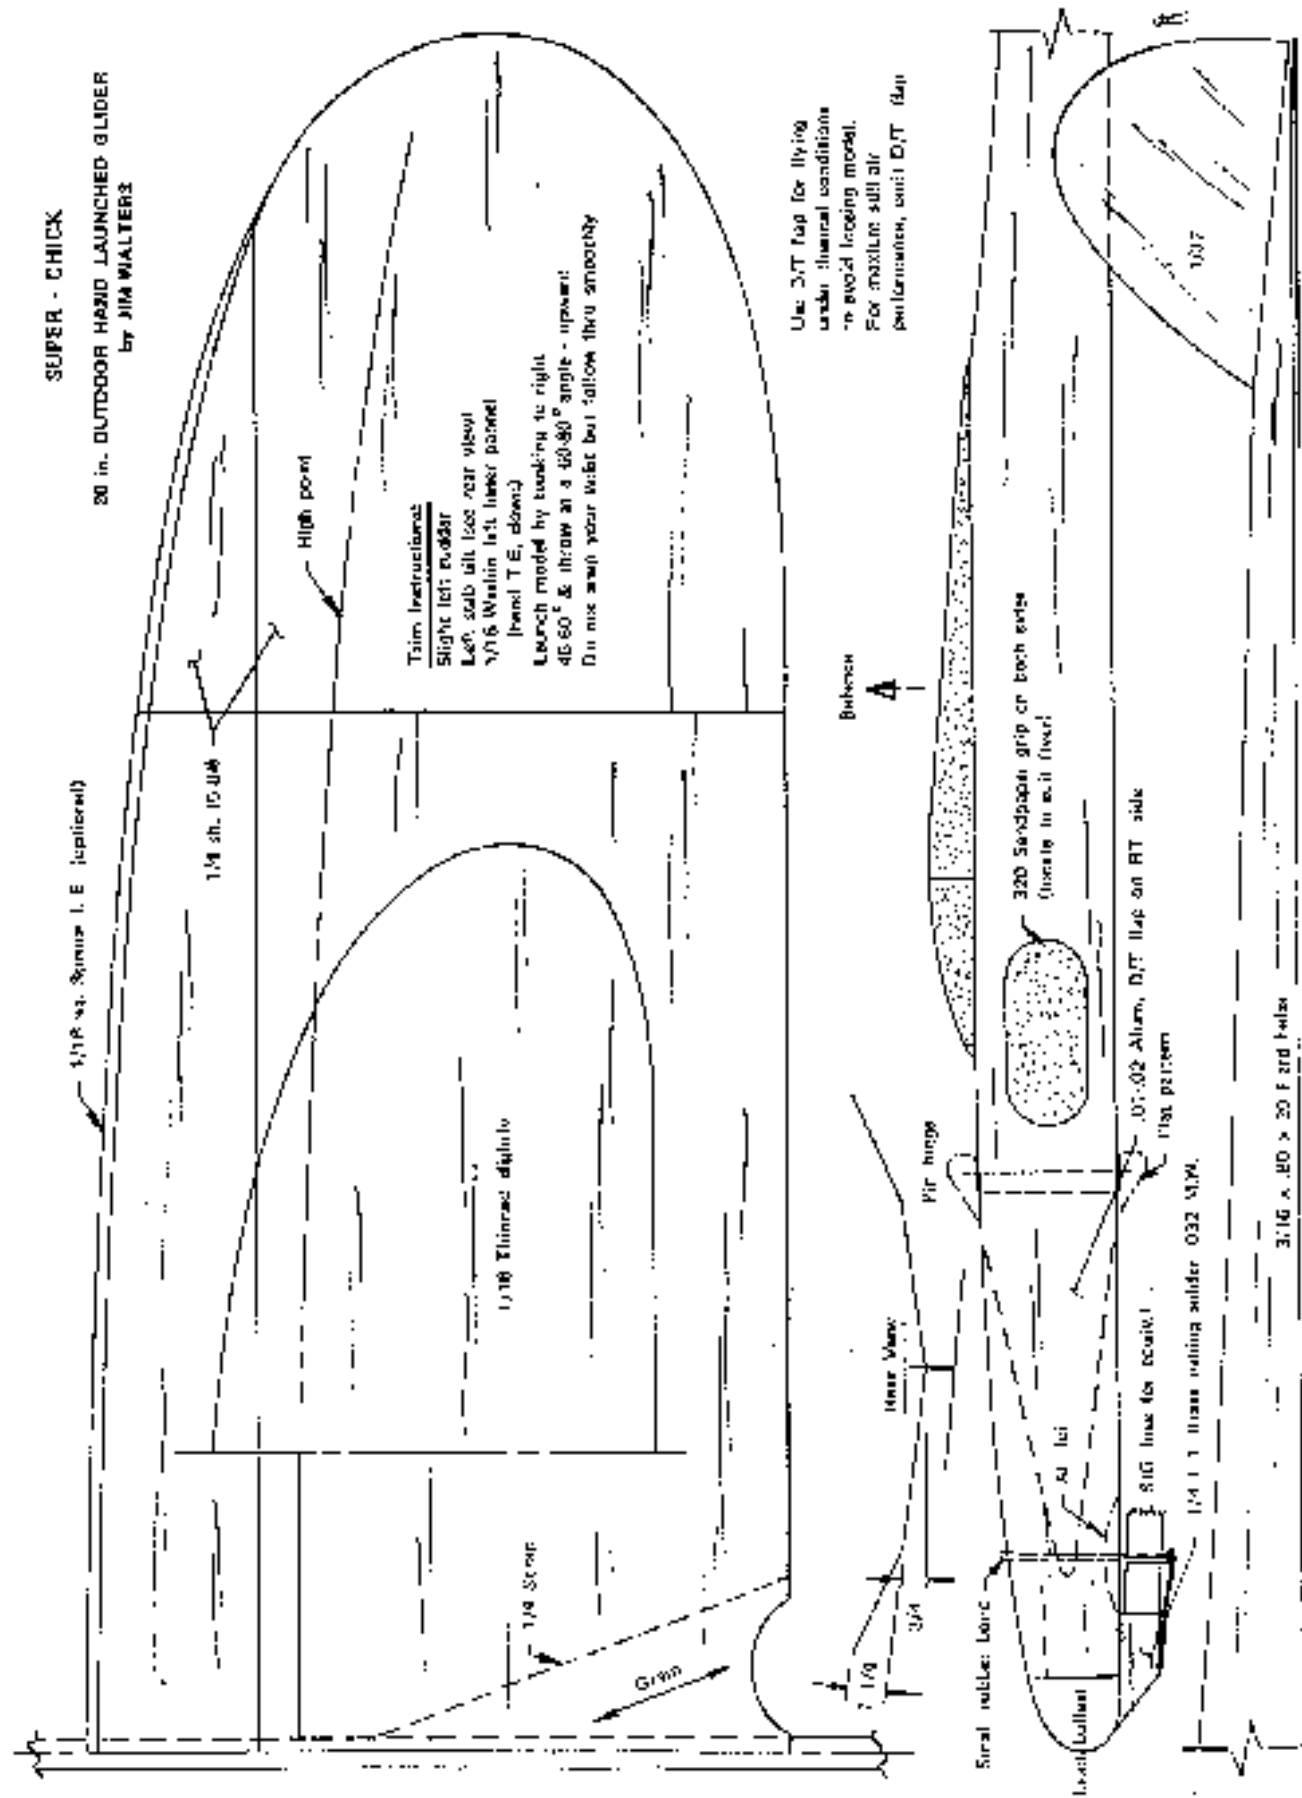

Trim instructions:
 Slight left rudder
 Left stab tail (see rear view)
 1/16 Washin left inner panel
 (press T E, down)
 Launch model by looking to right
 45-60° & throw at a 40-50° angle - upward!
 Do not wrap your wrist but follow thru smoothly

Use D/T flap for flying
 under unusual conditions
 to avoid looping model.
 For maximum still air
 performance, omit D/T flap

3/16 x .80 x 20 F and holes