


SUPER - CHICK

20 in. OUTDOOR HAND LAUNCHED GLIDER
by JIM WALTERS

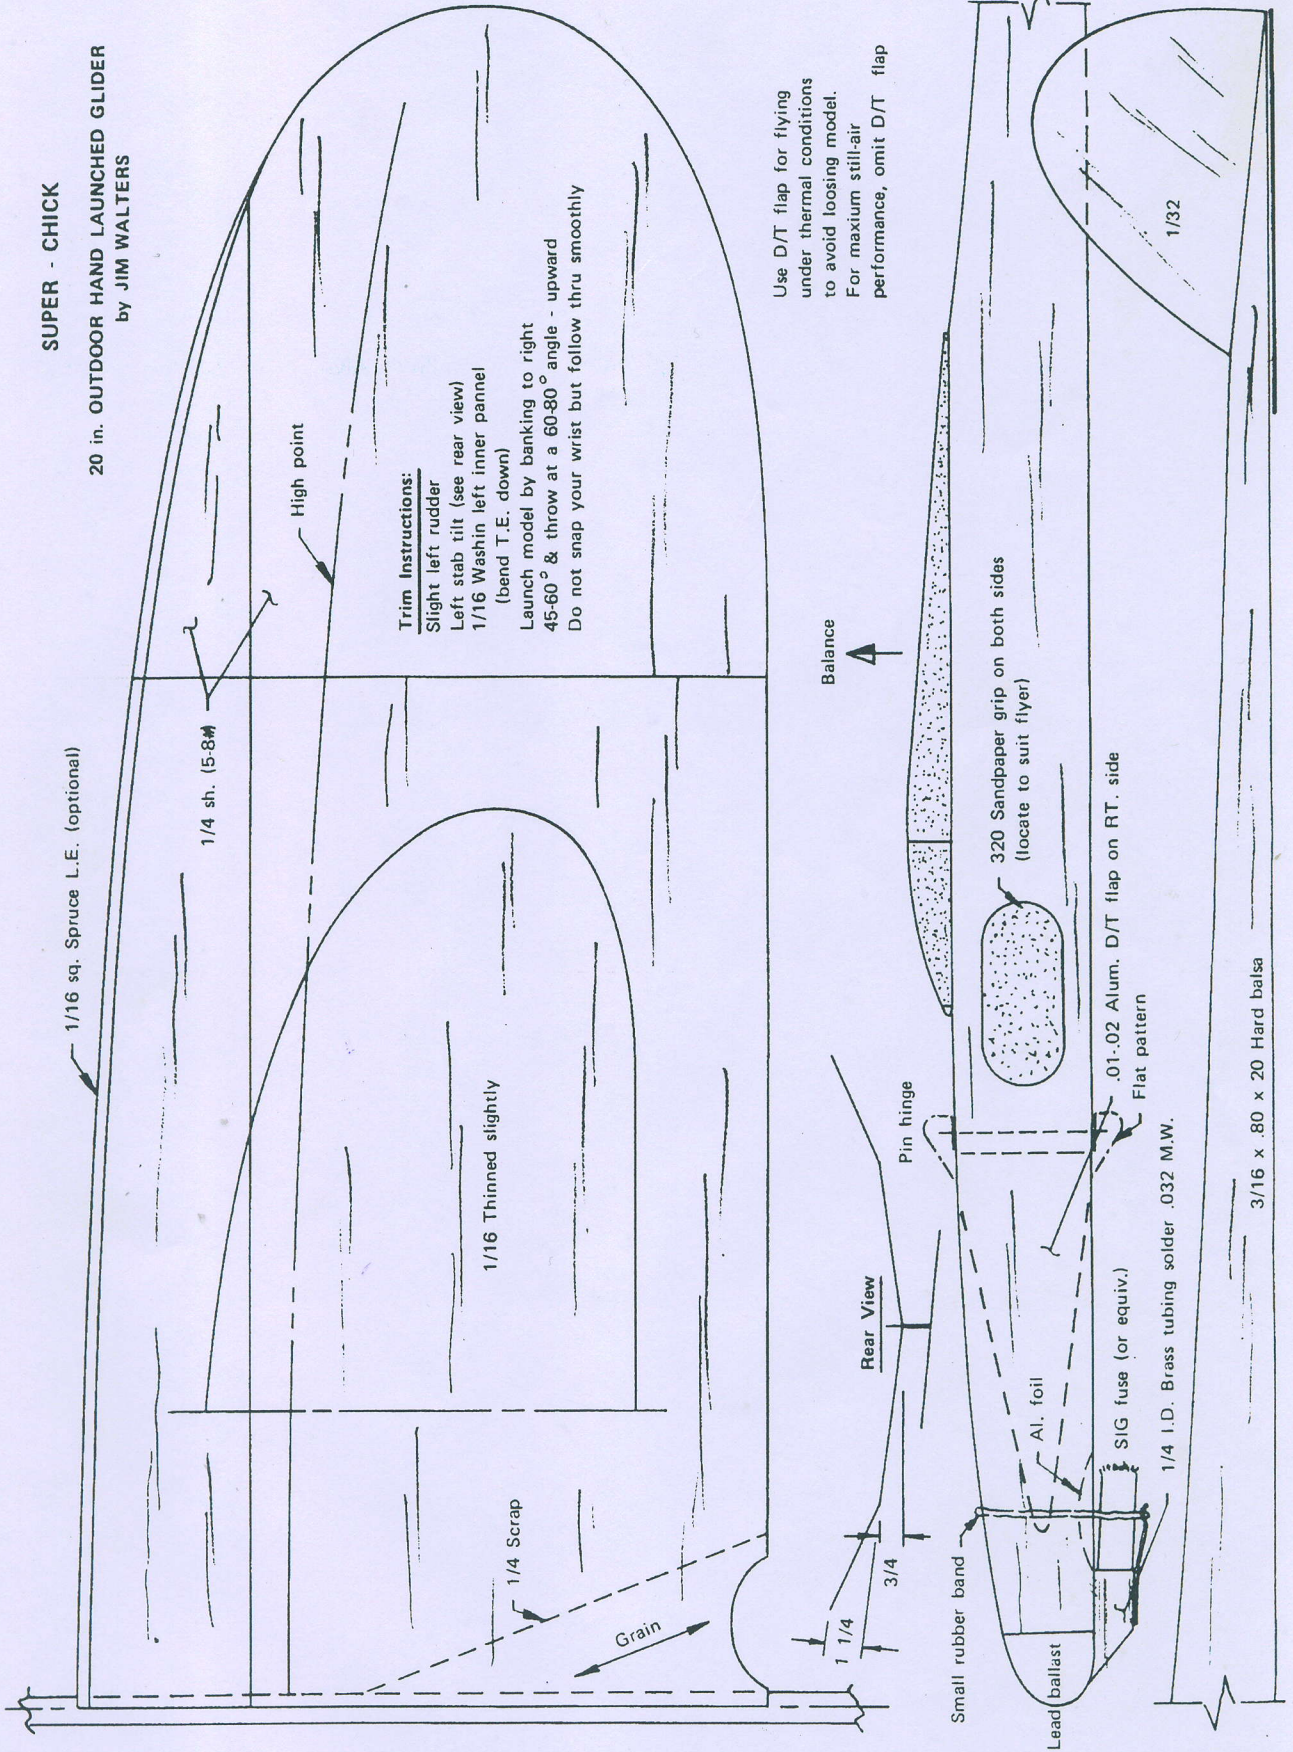

Trim Instructions:

- Slight left rudder
- Left stab tilt (see rear view)
- 1/16 Washin left inner pannel (bend T.E. down)
- Launch model by banking to right 45-60° & throw at a 60-80° angle - upward
- Do not snap your wrist but follow thru smoothly

Use D/T flap for flying under thermal conditions to avoid loosing model. For maximum still-air performance, omit D/T flap